

Základní nastavení ZTE H6645P pro přístup k internetu


Zapojíme router ZTE H6645P a přes LAN1 port připojíme notebook nebo stolní počítač. Alternativou je připojení přes WiFi, název sítě a heslo je na spodní straně routeru.

Do internetového prohlížeče (např. Microsoft Edge, Google chrome...) zadáme adresu 192.168.1.1

Přihlásíme se od routeru:

Username: admin

Password: Haikui_V2

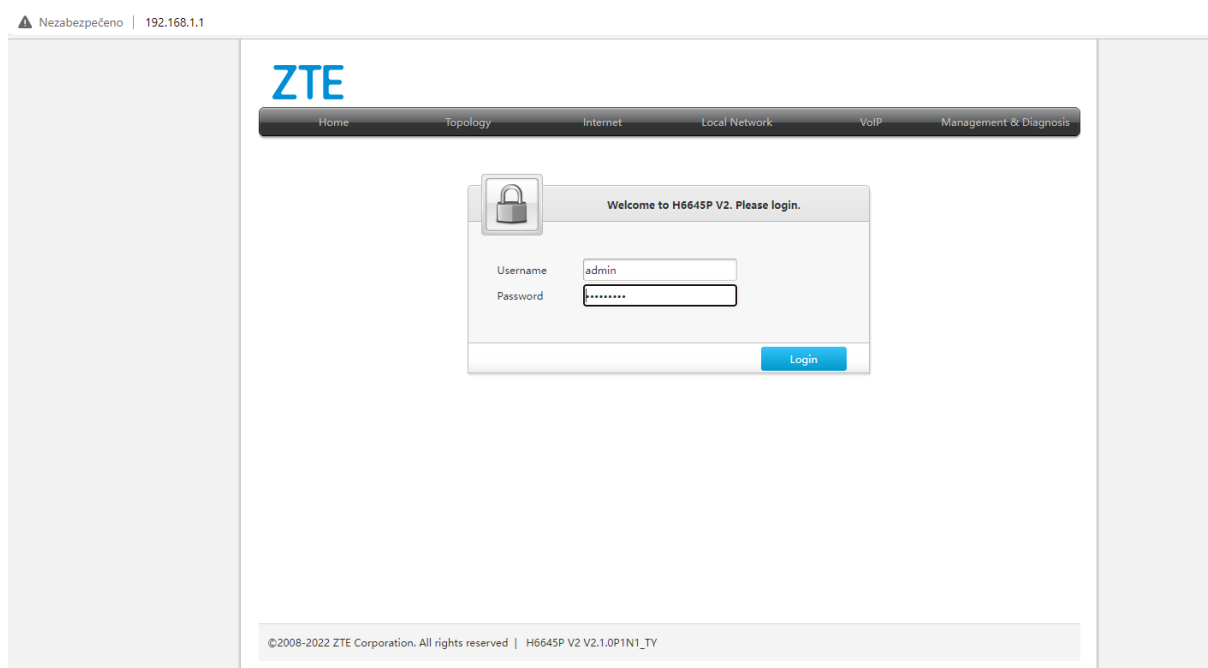

Po prvním přihlášení je možné nastavit nové heslo. V případě, že nechcete heslo změnit, zvolte CANCEL.

ZTE

Home


Topology

Internet


Local Network


VoIP

Management & Diagnosis



Welcome to H6645P V2

 Note: For security, please modify the initial password.

 A strong password should match these rules:

1. It should have at least 8 characters.
2. It should be composed of digits, alphabet and special symbols.
3. It should not have context relationship with the username, such as the same or inverse.

Username

New Password

Confirmed Password

V horní záložce zvolíme INTERNET a v levém menu zvolíme WAN

The screenshot displays the ZTE web management interface. At the top left is the ZTE logo. The current time is 1970-01-01T00:18. The user is logged in as 'admin' and can click 'Logout'. The navigation bar includes 'Home', 'Topology', 'Internet' (highlighted with a red box), 'Local Network', 'VoIP', and 'Management & Diagnosis'. On the left, a sidebar menu lists various settings: Status, WAN (highlighted with a red box), QoS, Security, Parental Controls, DDNS, SNTP, Port Binding, and Multicast. The main content area shows 'Page Information' for Ethernet connection configuration. Under 'Ethernet Connection', there is a 'New Item' form with the following fields: Connection Name (text input), Type (dropdown menu set to 'Routing'), Service List (checkboxes for INTERNET, TR069, VoIP, and IPTV, all checked), MTU (text input set to 1492), Link Type (dropdown menu set to PPP), and PPP Transfer Type (dropdown menu set to PPPoE). Below these are the PPP section with Username and Password text inputs, IP Version (dropdown menu set to IPv4), and VLAN (radio buttons for On and Off, with Off selected). At the bottom right of the form are 'Apply' and 'Cancel' buttons. A '+ Create New Item' link is located at the bottom left of the form area.

Novou položku WAN vyplníme následovně:

- 1) Connection Name: WAN_Internet
- 2) PPP sekce se vyplní dle poskytovatele (např. Username CETIN, Password CETIN)
- 3) VLAN zakliknout on
- 4) VLAN ID doplnit hodnotu 848
- 5) Potvrdíme tlačítkem Apply

Page Information

This page provides the function of Ethernet connection parameter(s) configuration.

▼ Ethernet Connection

▼ New Item Detail

Connection Name	WAN_Internet
Type	Routing
Service List	<input checked="" type="checkbox"/> INTERNET <input checked="" type="checkbox"/> TR069 <input checked="" type="checkbox"/> VoIP <input type="checkbox"/> IPTV
MTU	1492
Link Type	PPP
PPP Transfer Type	PPPoE
PPP	
Username	CETIN
Password
IP Version	IPv4
VLAN	<input checked="" type="radio"/> On <input type="radio"/> Off
VLAN ID	848

Následně přejděte v menu na položku Port Binding:

- 1) Rozklikněte WAN_Internet
- 2) Klikněte na položku All On
- 3) Potvrďte tlačítkem Apply

The screenshot shows the ZTE web management interface. The top navigation bar includes 'Home', 'Topology', 'Internet', 'Local Network', 'VoIP', and 'Management & Diagnosis'. The 'Internet' tab is selected. On the left sidebar, 'Port Binding' is highlighted. The main content area is titled 'Page Information' and 'Port Binding'. Under 'Port Binding', 'WAN_Internet' is expanded, showing a list of checkboxes for LAN1-4, SSID1-8, APCLI1, APCLI5G1, SSID9, and SSID10. The 'All On' button is highlighted, and the 'Apply' button is visible.

©2008-2022 ZTE Corporation. All rights reserved | H6645P V2 V2.1.0P1N1_TY